


1. ATTACH A HEADBAND OR EAR HOOK

Behind-the-neck



Over-the-head

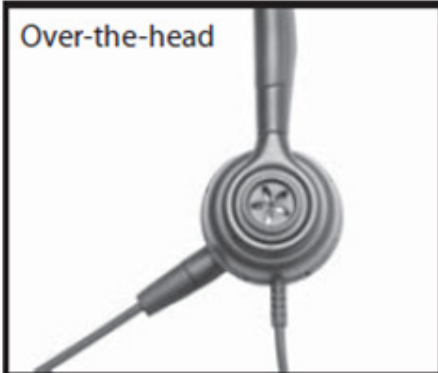

Over-the-ear



2. ATTACH EAR CUSHION

Behind-the-neck



Over-the-head



Over-the-ear (cushion optional)



AMI TRIA (UC3) Headset

Position the microphone about one finger's width away from your face near the corner of your mouth (Figure A). The flat side of the microphone housing is the talk-side (Figure B). This side must face your mouth.



Fig. A



Fig. B

- **AMPLIFIER CONNECTION:** Connect Tria to the amplifier's headset cord.
- **DIRECT CONNECT TO HEADSET-READY PHONE:** Connect Tria to a lower cord that is compatible with your phone. Then connect lower cord into the phone's headset port. Some phones allow connection to the handset port (consult the phone's manual).
- **COMPUTER CONNECTION:** Connect AMI TRIA to a USB adapter-cord (f.e. USB-X200-001)